

Installation of the USB-Driver for VCUSB

1. Software VC1xxCDB Download and Installation

First download the Software VC1xxCDB from the MMF Homepage. The latest version of the program is available at <http://www.mmf.de/software-download.htm>.

To start the installation, run the program and follow the steps as prompted by the assistant. The USB-Driver will be copied into the subdirectory **USB-Driver**. The default directory path is:

C:\Program Files (x86)\Metra Radebeul\VC1xxCDB\Resources\USB-Driver

2. USB-Driver Installation for Windows 7 und 8

Connect the VCUSB Adapter to an available USB port on your computer using the cable provided. The driver installation will start automatically and search for available drivers on the network.

Click on the icon in the information area of the task bar to display the installation progress window.


The driver **VC110 Vibration Calibrator** will not be located during an automatic installation. It has to be installed manually.

Open the device manager by clicking on **Start / Control Panel / Device Manager**.

The Device Manager window will open.

The VC110 Vibration Calibrator (for which the driver is not installed automatically) will be displayed below the **Other Devices** node.

To install the driver manually click on **VC110 Vibration Calibrator**, and use right-click to open the **Context menu** and left-click to select **Update Driver Software**.

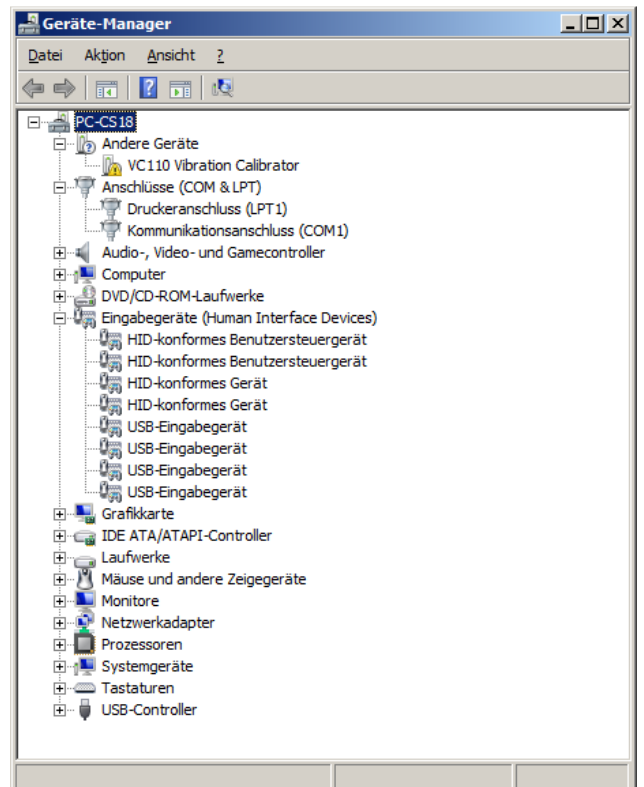

The assistant window will appear.

Select the option **Search for Driver Software on the Computer**, using left-click.




Select the directory containing the USB Driver.

The default path is:

**C:\Program Files (x86)\Metra
Radebeul\VC1xxCDB\Resources\USB-Driver**

Press **Continue** to install the USB Driver.

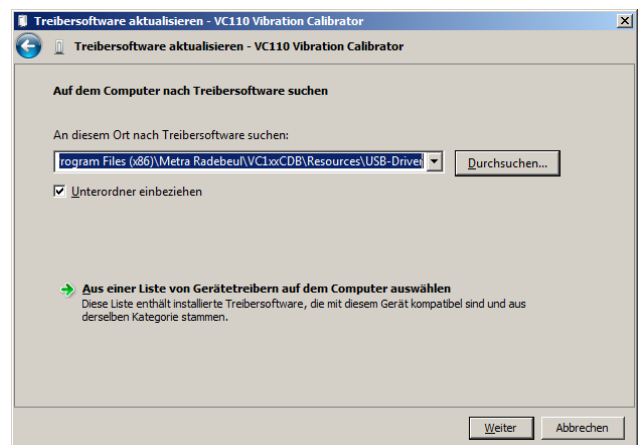

The USB Driver has now been successfully installed and the device can now be used.

